


ML-10-TDS-NCR

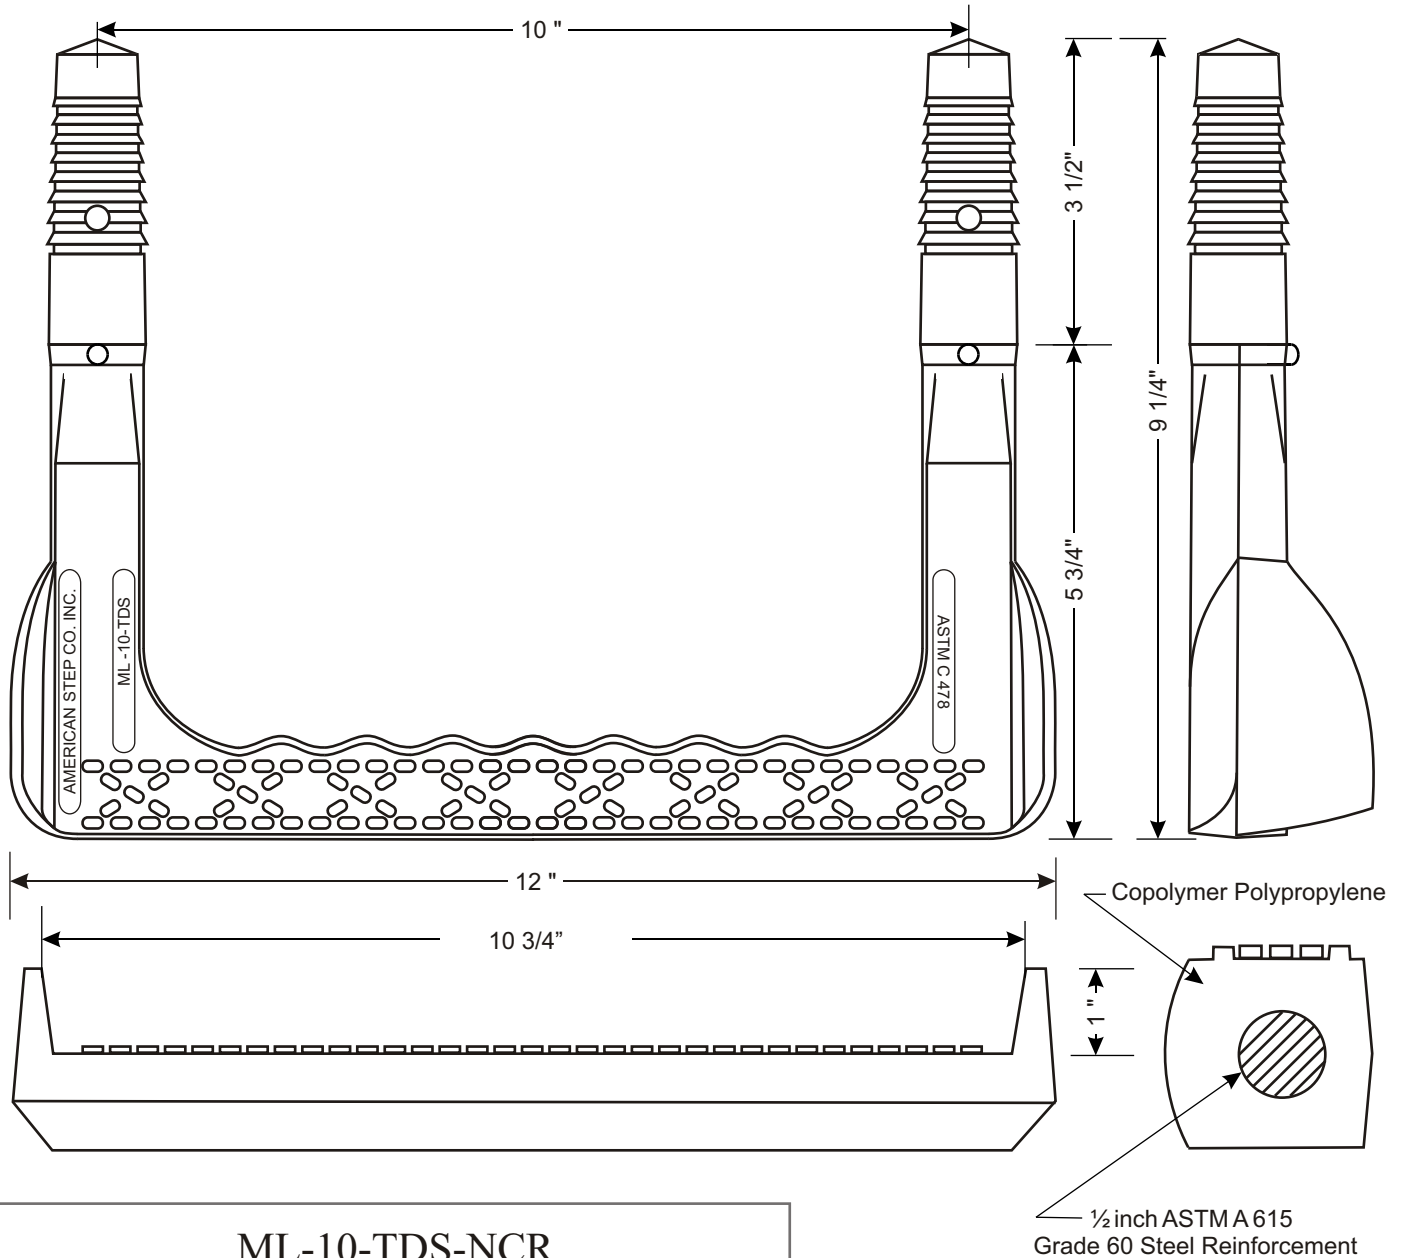

ML-10-TDS-NCR

Mechanical Lock Installation Methods
Minimum Concrete Strength Must Be 3000 psi.

Preformed Holes

Two preformed holes on 10" centers
Holes must be parallel
Diameter of holes are 1.1" tapering to 7/8" in 3 1/2" of depth

Drilled Holes

Drill two 1" holes on 10" centers with a minimum depth of 3 3/4"
Use 1" masonry bit for drilling.
Holes must be parallel.

Drive step with sledge hammer until both legs are completely seated

This step meets or exceeds ASTM C 478 and OSHA Standards when properly installed.



American Step Company, Inc.
P.O. Box 137
830 East Broadway
Griffin, GA 30224-0137

800-988-STEP
770-467-9844 (OFFICE)
770-467-8011 (FAX)